

## Sentinel® TDC+ Quick Reference Guide

### Function Keys

- TIME** - Press to prompt Time/Day display.
- AUTO STATUS** - Press to display automatic program status.
- SHUTDOWN** - Press to immediately shut down all watering. **Does not function while in the Edit mode!**
- HELP** - Displays context-sensitive help while in the Edit mode.

### Access/Edit Control Features


- Press / keys to select the control category.
- Press / keys to select category function.
- Press key to select Edit mode.
- Press or keys to position cursor under edit point.
- Use numeric or / keys to edit selection.
- Press key to save.
- Press key *two times* to exit Edit mode.

### Set Unit Address Code (required for Central Control)

- Press / keys to select **UTILITY** control category.
- Press / keys to select **Unit Code**.
- Press key to select: **CODE = (000)**.
- Use numeric keys to enter 3-digit code.
- Press key to save edit.
- Press key *two times* to exit Edit mode.

### Select Two-Wire Decoder Operation

- Press key to select **UTILITY**.
- Press key to select: **2W/Irritrol**.
- Press key to select: **Mode: ON** (or **OFF**).
- Press or key to change mode selection.
- Press key to save selection.
- Press key *two times* to exit Edit mode.
- Press to select **ZONE/ET DATA** function.
- Press or key to select: **Station Type**.
- Press key to select: **STN 01**.
- Press or key to change station number.
- Press to select current station type.
- Press or to select: **TORO-2WD**.
- Press key to save.
- Press key to exit Edit mode.
- Press to select: **Map Stations**.
- Press key to select: **aa-->0bb/bbb:0c** (*aa* = station 01–99, *bb/bbb* = 5-digit decoder address, *c* = decoder output 1–4).
- Use numeric, / and / keys to edit.
- Press key to save.
- Press key to exit Edit mode.

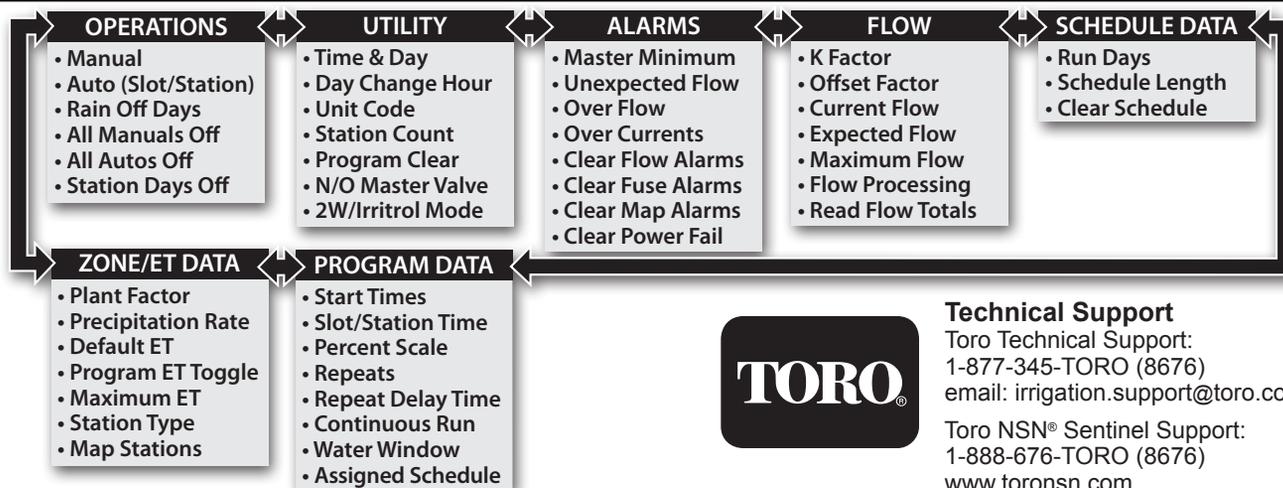

### Technical Support

Toro Technical Support:  
1-877-345-TORO (8676)  
email: [irrigation.support@toro.com](mailto:irrigation.support@toro.com)

Toro NSN® Sentinel Support:  
1-888-676-TORO (8676)  
[www.toronnsn.com](http://www.toronnsn.com)

**Time** \_\_\_\_\_

00:00- Hours:Minutes (12-hour format)

A - AM

P - PM

**Day** \_\_\_\_\_

SU - Sunday

MO - Monday

TUE - Tuesday

WED - Wednesday

TH - Thursday

FR - Friday

SA - Saturday

**Week** \_\_\_\_\_

W1 - Week one of schedule

W2 - Week two of schedule

W3 - Week three of schedule

W4 - Week four of schedule

W5 - Week five of schedule

W6 - Week six of schedule

**Sensor** \_\_\_\_\_1 - Sensor active – *Normally open switch is closed; normally closed switch is open.*O - Open – *Dry contact sensor switch is open.*C - Closed – *Dry contact sensor switch is closed.***Remote** \_\_\_\_\_A - All Call – *Responds to all broadcast handheld remote commands.*S - Secure – *Responds only to handheld remote commands sent to unit's address code.*L - Locked – *Unit restricted from handheld remote commands.***Actual Flow** \_\_\_\_\_

00000 - Five-digit value indicates measured flow.

**Expected Flow** \_\_\_\_\_

00000 - Five-digit value indicates expected flow.

**Flow Status** \_\_\_\_\_:) - Measured flow *equal* to expected flow.+ - Measured flow *more* than expected flow.-- - Measured flow *less* than expected flow.*(blank)* - No measured flow.**Alarm Status** \_\_\_\_\_

A - Flow alarm condition exists.

*(blank)* - No alarm condition exists.